


# Washform

NZ Made. Designed for modern washrooms.

## The Harp – Urinal Divider Installation Instructions

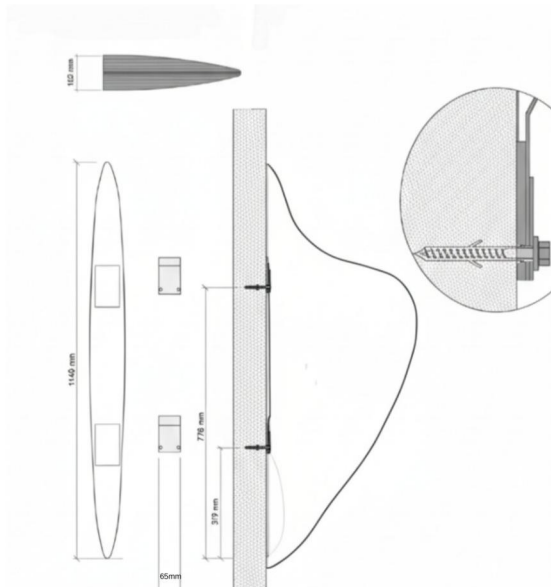

### Installation Instructions

Mount The Harp divider using the supplied concealed fixings. Use appropriate hardware for your wall type.

Align the lower edge of the divider with the lower edge of adjacent urinals. Typical spacing between two urinals is 600 mm measured centre to centre. After mounting, apply a continuous bead of silicone sealant around the outer edge of the divider to ensure a hygienic seal. All required components and screws for mounting The Harp are included. For non-standard wall types, consult a professional installer. Note: Ensure that installation complies with local building codes and standards